C.B. & AUTO.

C.B. SYSTEM
SHARED SERVICE (MANUAL)
SUBSCRIBERS EXTENSION PLAN 7&7A(INTERNAL & EXTERNAL)
USING TELEPHONE No.706... AT EXTENSION AND BELL-SET No.39,39A OR 44 AT MAIN

N4590
5 PANELS-1
30·10·59

NOTES

1. THIS DIAGRAM SHOWS THE USE OF THE TELEPHONE No.706... AS THE EXTENSION TELEPHONE OF PLANS 7&7A, WITH A BELL-SET No. 39, 39A OR 44 AND 200-TYPE OR 300-TYPE TELEPHONES AT THE MAIN AS SHOWN ON DIAGRAMS N4391 & N4392

2. APPARATUS REQUIRED

   INTERNAL EXTENSION FROM BELL-SET No.39,39A OR 44
   - TELEPHONE No.706...
   - SWITCH No.5A-1
   - LABEL No.358B
   - BELL No.56A...
   - CORD INST. No.4/83AA...

   EXTERNAL EXTENSION FROM BELL-SET No.39A OR 44
   - TELEPHONE No.706...
   - GENERATOR No.26 AP
   - CORD INST. No.3/13B...

3. ON INTERNAL EXTENSIONS RECOVER CORD INST. No.3/108AA... FROM TELEPHONE No.706... AND FIT CORD INST. No.4/83 AA... FIT SWITCH No.5A-1 AND LABEL No.358B..

4. REARRANGE STRAPS ON BLOCK TERMINAL No.30 AND TELEPHONE No.706... AS SHOWN.

5. WHEN AN EXTENSION BELL IS REQUIRED CONNECT IN PLACE OF STRAP BT2-BT5

W

N4590
5 PANELS-2

INTERNAL EXTENSION FROM BELL-SET No.39,39A OR 44

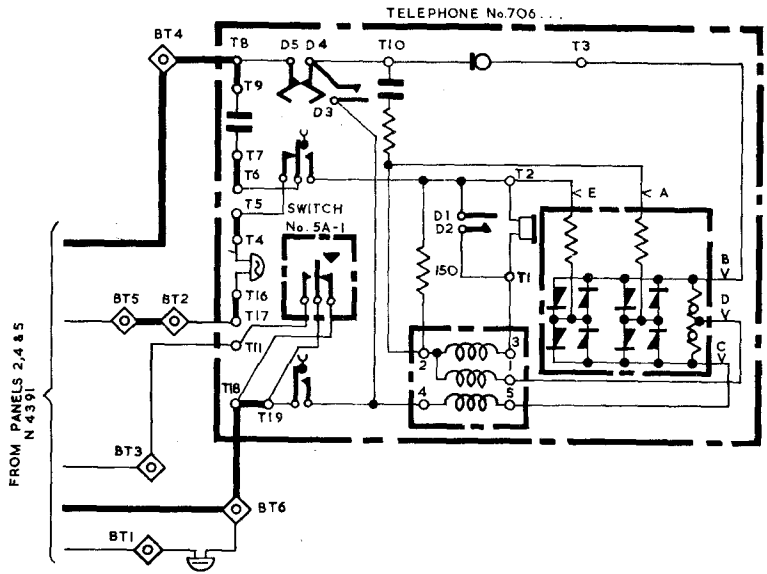

C.B. SYSTEM

SHARED SERVICE (MANUAL)

SUBSCRIBERS EXTENSION PLAN 7&7A(INTERNAL & EXTERNAL) USING TELEPHONE No.706... AT EXTENSION AND BELL-SET No.39,39A OR 44 AT MAIN

WIRING

INTERNAL EXTENSION FROM BELL-SET No.39,39A OR 44

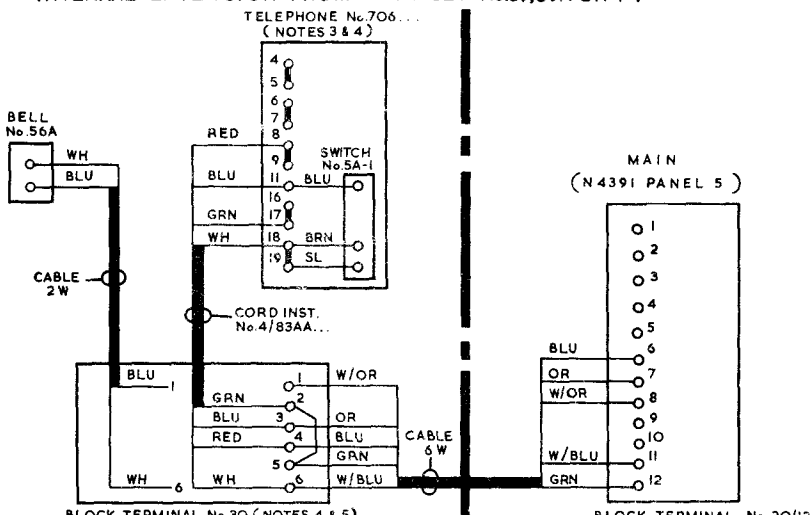

N4590
5 PANELS - 4

EXTERNAL EXTENSION FROM BELL-SET No. 39A OR 44

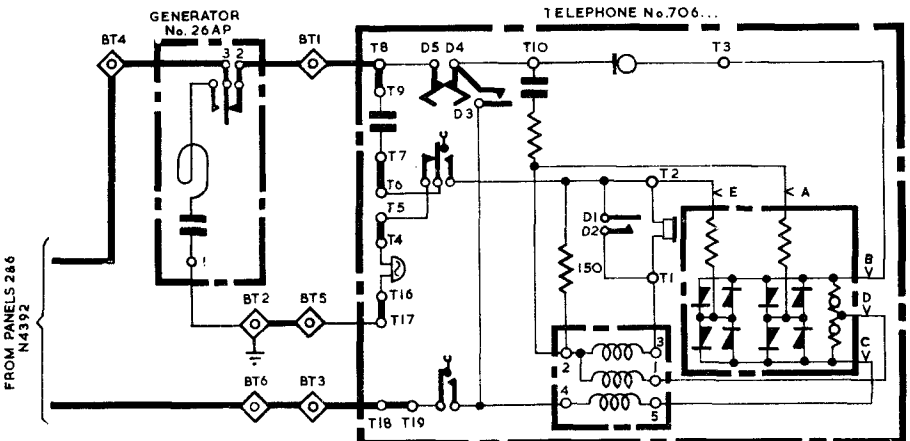

C.B. SYSTEM

SHARED SERVICE (MANUAL)
SUBSCRIBERS EXTENSION PLAN 7&7A(INTERNAL & EXTERNAL)
USING TELEPHONE No.706... AT EXTENSION
AND BELL-SET No.39,39A OR 44 AT MAIN

EXTERNAL EXTENSION FROM BELL-SET No.39A OR 44